YAZOO

INSTRUCTION MANUAL

YAZOO MASTER MOWER
SINCE 1945

for

ASSEMBLY
OPERATION
MAINTENANCE
WARRANTY
PARTS

OF
COMMERCIAL
YAZOO RIDING TRACTORS

YR-36
YR-42
YR-48
YR-60
YR-76
YAZOO TRAILER
YT-10 HD

Caster Wheel yoke bushings:
1 1/4" x 1" 0215-122
3/4" x 1" 0215-009

YAZOO
MANUFACTURING COMPANY, INC.

YAZOO MASTER MOWER

P.O. BOX 4449 / 3607 LIVINGSTON ROAD
PHONE: 366-6421 / JACKSON, MISSISSIPPI 39216

EFFECTIVE SEPTEMBER 1, 1979

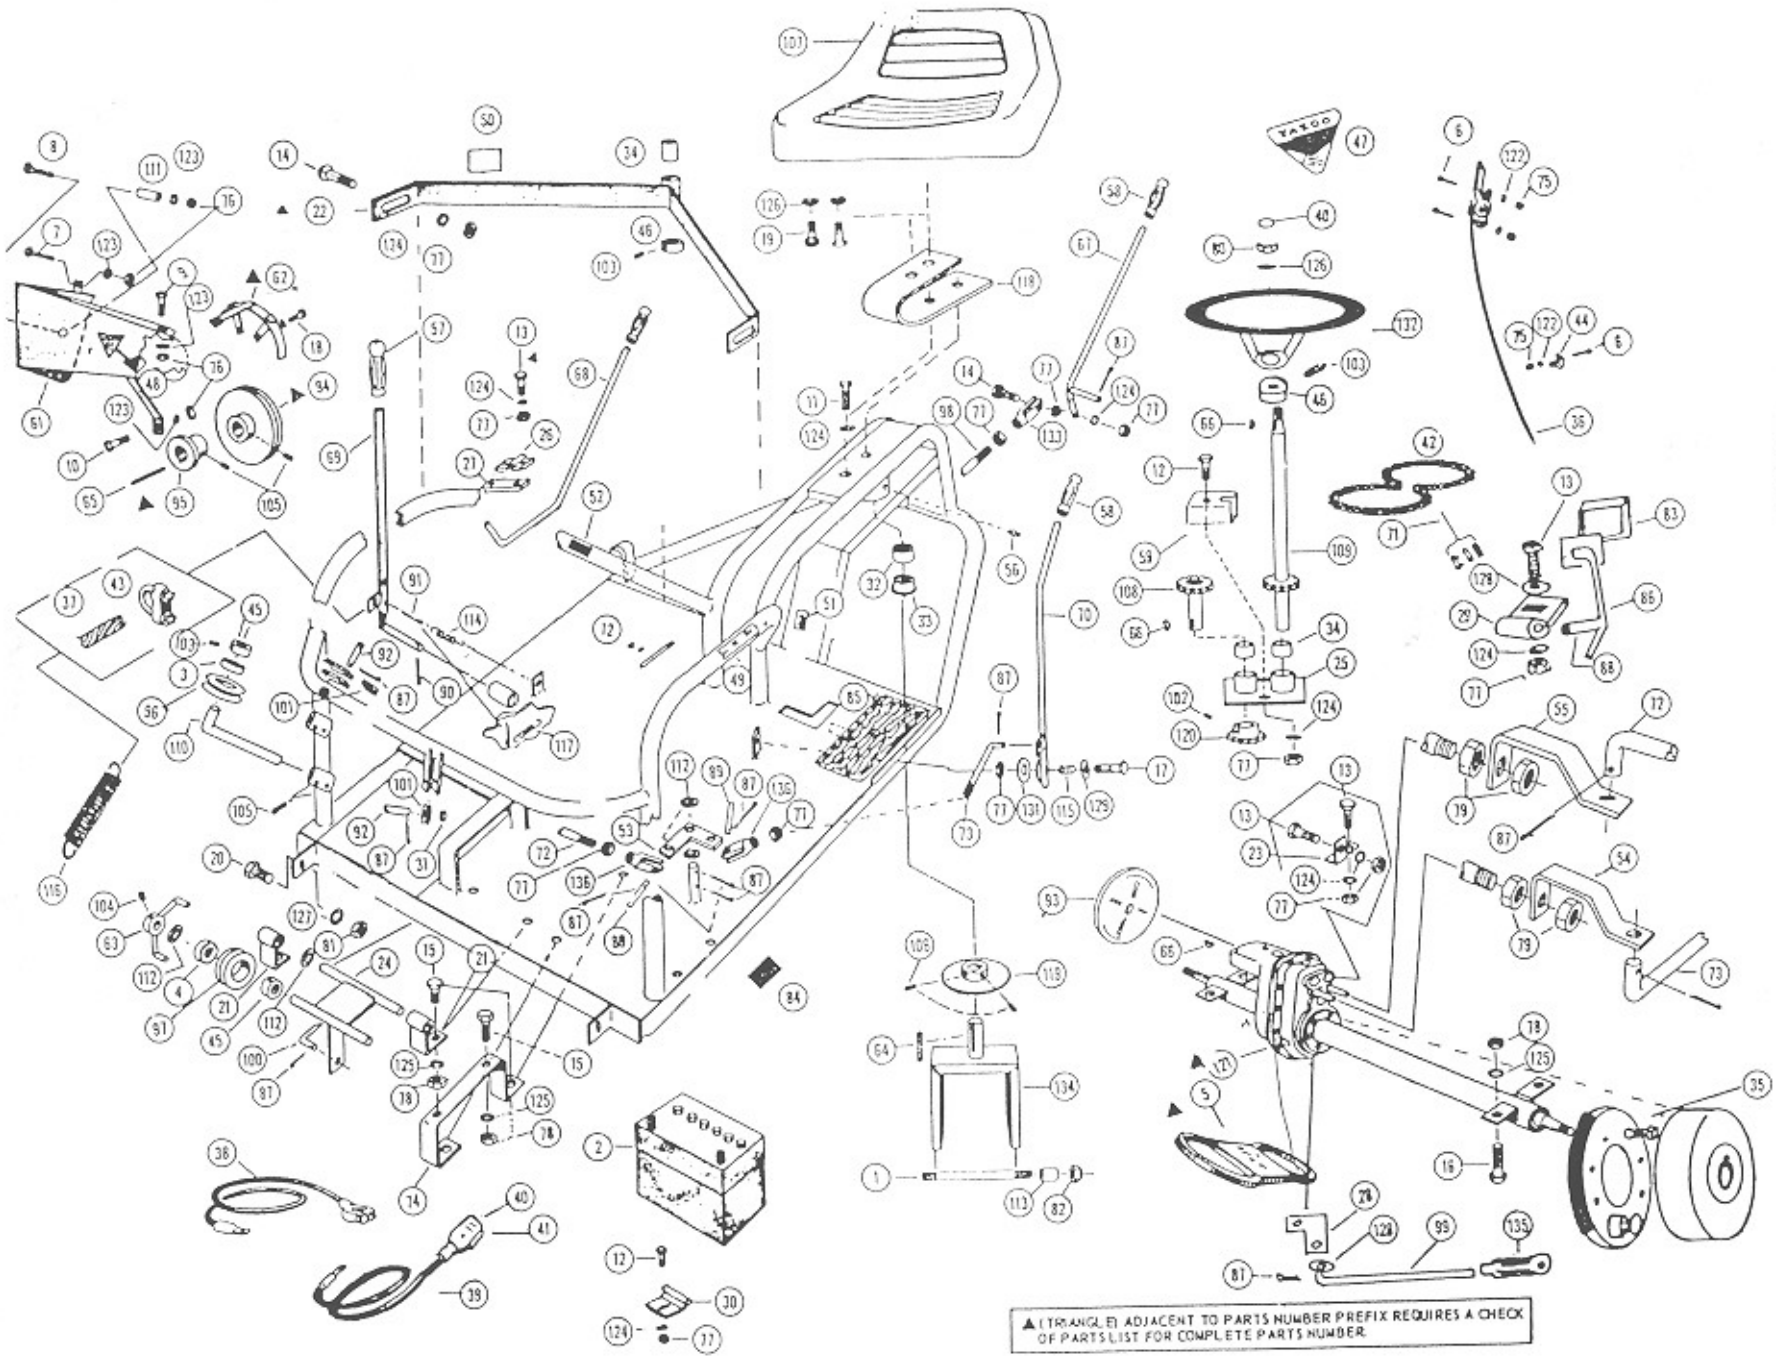

▲ (TRIANGLE) ADJACENT TO PARTS NUMBER PREFIX REQUIRES A CHECK OF PARTS LIST FOR COMPLETE PARTS NUMBER.

YR-42, 48, 60, & YR76 CHASSIS

YR-42, 48, 60, & YR-76 Chassis

No.	Part No.	Description
1	103-020	Axle, Rear Wheel
2	203-003	Battery
3	204-019	Bearing, Ball
4	204-020	Bearing, Ball
5 ▲	205-070	Belt, Trans. Dr. (YR-42 & YR-48)
5 ▲	205-071	Belt, Trans. Dr. (YR-60 & YR-76)
6	208-002	Bolt, 3/16 x 3/4 RH
7	208-028	Bolt, 1/4-20 x 1 3/4 RH
8	208-032	Bolt, 1/4-20 X 4 RH
9	209-021	Bolt, 1/4-20 x 3/4 HH
10	209-026	Bolt, 1/4-20 x 1 HH
11	209-108	Bolt, 5/16-18 x 3/4 HH
12	209-114	Bolt, 5/16-18 x 1 HH
13	209-120	Bolt, 5/16-18 x 1 1/4 HH
14	209-138	Bolt, 5/16-18 x 2 HH (Specify Full Thread)
15	209-326	Bolt, 3/8-16 x 1 1/2 HH H.T.
16	209-350	Bolt, 3/8-16 x 2 1/2 HH
17	209-391	Bolt, Soc. HD. 3/8 x 3
18	209-414	Bolt, 7/16-14 x 3/4 HH (Briggs Belt Guard)
19	209-494	Bolt, 1/2-13 x 3/4
20	209-617	Bolt, 5/8-18 x 1 1/2 HH
21	214-104	Bracket, Idler Mounting
22 ▲	214-105	Bracket, Upper Steering (YR-42, YR-48, & YR-60)
22 ▲	214-209	Bracket, Ass'y. Upper Steering YR-76
23	214-106	Bracket, Transmission Support
24	214-108	Bracket, Idler
25	214-144	Bracket, (adj.) Lower
26	214-148	Bracket, Hi-Lo Lever Mtng.
27	214-149	Bracket, Plate
28 ○	214-152	Bracket, Brake Actuating
29 •	214-153	Bracket, Brake Pedal
30	214-206	Bracket, Ass'y. Battery
31	215-022	Bushing, 5/8 I.D. x 13/16 O.D. Cable Roller
32	215-101	Bushing, Upper R. Wheel Yoke
33	215-102	Bushing, Lower R. Wheel Yoke
34	215-103	Steering, Bracket
35	217-003	Brake, 5"
36	301-018	Cable, Throttle, Briggs & Stratton
37	301-030	Cable, Cutting Section Lift
38	301-057	Cable, Battery (Negative)
39	301-058	Cable, Battery (Positive)
40	303-015	Cap, Steering Wheel
41 ▲	303-016	Cap, Battery Red
41 ▲	303-017	Cap, Battery Black
42	305-045	Chain, #41 Steering
43	307-002	Clamp, Cutt. Sect. Lift Cable
44	307-004	Clamp, Throttle Cable
45	311-002	Collar, 5/8 Set
46	311-003	Collar, 3/4 Set
47	401-002	Decal, YAZOO MASTER MOWER
48 ▲	401-042	Decal, 42 Inch Cut
48 ▲	401-048	Decal, 48 Inch Cut
48 ▲	401-060	Decal, 60 Inch Cut
48 ▲	401-076	Decal, 76 Inch Cut
49	401-080	Decal, Fwd-Neutral-Reverse
50	401-081	Decal, Hi-Lo
51	401-082	Decal, Cut
52	401-097	Decal, Brake Caution
53	501-002	Elbow, Clutch
54 •	502-011	End, Hi-Lo Selector Band
55 •	502-012	End, Clutch End
56	603-004	Fitting, 1/4-28 Self Tapping Grease
57	703-001	Grip, 7/8" Handle
58	703-003	Grip, 1/2" Handle
59	704-084	Guard, Steering Gear
60	704-185	Guard, Belt (YR-76 W/TJD-1)
61	704-221	Guard, Transmission Drive Belt
62 ▲	704-223	Guard, Belt (AGND)
62 ▲	704-285	Guard, Belt (Briggs)
62 ▲	704-286	Guard, Belt (YR-76)
63	705-006	Guide, Belt
64	1102-002	Key, 1/4 x 1/4 x 1
65 ▲	1102-012	Key, 1/4 x 1/4 x 3 Eng. Pulley, YR42, 48, & 60
65 ▲	1102-024	Key, 3/8 x 3/8 x 3 Eng. Pulley YR76
66	1102-013	Key, 3/16 x 3/4 Woodruff
67	1201-006	Lever, Blade Engaging
68 ▲	1201-007	Lever, Clutch, YR-42, 48 & 60
68 ▲	1201-016	Lever, Clutch, YR-76
69	1201-008	Lever, Cutt. Sect. Lift
70	1201-036	Lever, Clutch
71	1204-001	Link, #41 Master Chain
72	1205-015	Linkage, Short Clutch
73	1205-016	Linkage, Long Clutch
74 ▲	1302-023	Mount, Engine AGND
74 ▲	1302-035	Mount, Engine YR-76
75	1401-001	Nut, 3/16-24
76	1401-010	Nut, 1/4-20
77	1401-020	Nut, 5/16-18
78	1401-030	Nut 3/8 USS
79	1401-032	Nut, 3/8-24
80	1401-051	Nut, 1/2-20
81	1401-070	Nut, 5/8-18 Jam
82	1401-081	Nut, 3/4-16 Lock
83	1601-001	Pad, Pedal
84	1601-003	Pad, Battery (Positive Side)
85	1601-004	Pad, Foot
86	1602-011	Pedal, Brake
87	1604-002	Pin, 3/32 x 1 Cotter
88	1604-003	Pin, 1/8 x 1 Cotter
89	1604-013	Pin
90	1604-037	Pin, 1/8 x 1 1/4 Cotter
91	1604-038	Pin, 3/16 x 1 Cotter
92	1604-060	Pin, Pulley 5/8 x 2 1/4
93	1608-112	Pulley, 9" Transmission
94 ▲	1608-130	Pulley, Trans. Dr. (Briggs)
94 ▲	1608-132	Pulley, Trans. Dr. (AGND)
94 ▲	1608-142	Pulley, Trans. Dr. (TJD-1)
95 ▲	1608-135	Pulley, Blade Dr. (AGND)
95 ▲	1608-136	Pulley, Blade Dr. (Briggs)
95 ▲	1608-143	Pulley, Blade Dr. (TJD-1)
96	1608-205	Pulley, 3" O.D.S.G. Idler
97	1608-206	Pulley, 3 1/2" O.D.D.G. Idler
98	1808-103	Rod, Clutch Engaging
99 •	1808-179	Rod, Brake
100	1808-180	Rod, Idler Blade
101	1809-001	Roller, Cable
102	1901-005	Screw, 5/16-18 x 1/4 A. Hd. Set
103	1901-006	Screw, 5/16-18 x 1/4 A. Hd. Set
104	1901-009	Screw, 5/16-18 x 5/16 A. Hd. Set
105	1901-033	Screw, 5/16-18 x 3/4 Sq. Hd. Set
106	1901-034	Screw, 3/8-16 x 3/4 Sq. Hd. Set
107	1903-012	Seat
108	1904-115	Shaft, Intermediate Steering
109	1904-116	Shaft, Ass'y. Steering
110	1904-152	Shaft, Idler Arm
111	1913-029	Spacer, Pine 1/4 x 1 7/8 Long
112	1913-040	Spacer, Washer 5/8 I.D. x 7/8 O.D.
113	1913-057	Spacer, Axle 3/4 x 1 O.D. x 1 Long
114	1916-012	Spring, Cutting Section Lever
115	1916-020	Spring, Clutch Lever
116	1916-051	Spring, Cutting Section Lift
117	1916-053	Brake Spring
118	1916-080	Spring, Seat
119	1917-044	Sprocket, 36 T. Rear Steering
120	1917-045	Sprocket, 12 T. Front Steering
121 ▲	2006-042	Transmission, Comp. (YR-42)
121 ▲	2006-060	Transmission, Comp. (YR-48, 60 & 76)
122	2301-001	Washer, 3/16 Lock
123	2301-003	Washer, 1/4 Lock
124	2301-004	Washer, 5/16 Lock
125	2301-006	Washer, 3/8 Lock
126	2301-008	Washer, 1/2 Lock
127	2301-011	Washer, 5/8 Ext. Star Lock
128	2301-021	Washer, 5/16 Flat
129	2301-022	Washer, 3/8 Flat
130	2301-024	Washer, 1/2 Flat
131	2301-045	Washer, 5/16 x 1 3/4 Fibre
132	2303-008	Wheel, Steering
133	2501-004	Yoke, 3/8
134	2501-018	Yoke, Steering
135	2501-027	Yoke, Adj. 1970 5/16-18 Threads
136	2501-030	Yoke, 3/8

• Used only with Transmission Brake

YAZOO MANUFACTURING COMPANY, INC.

YAZOO MASTER MOWER

P. O. BOX 4449 / 3607 LIVINGSTON ROAD
PHONE: (601) 366-6421 / JACKSON, MISSISSIPPI 39216

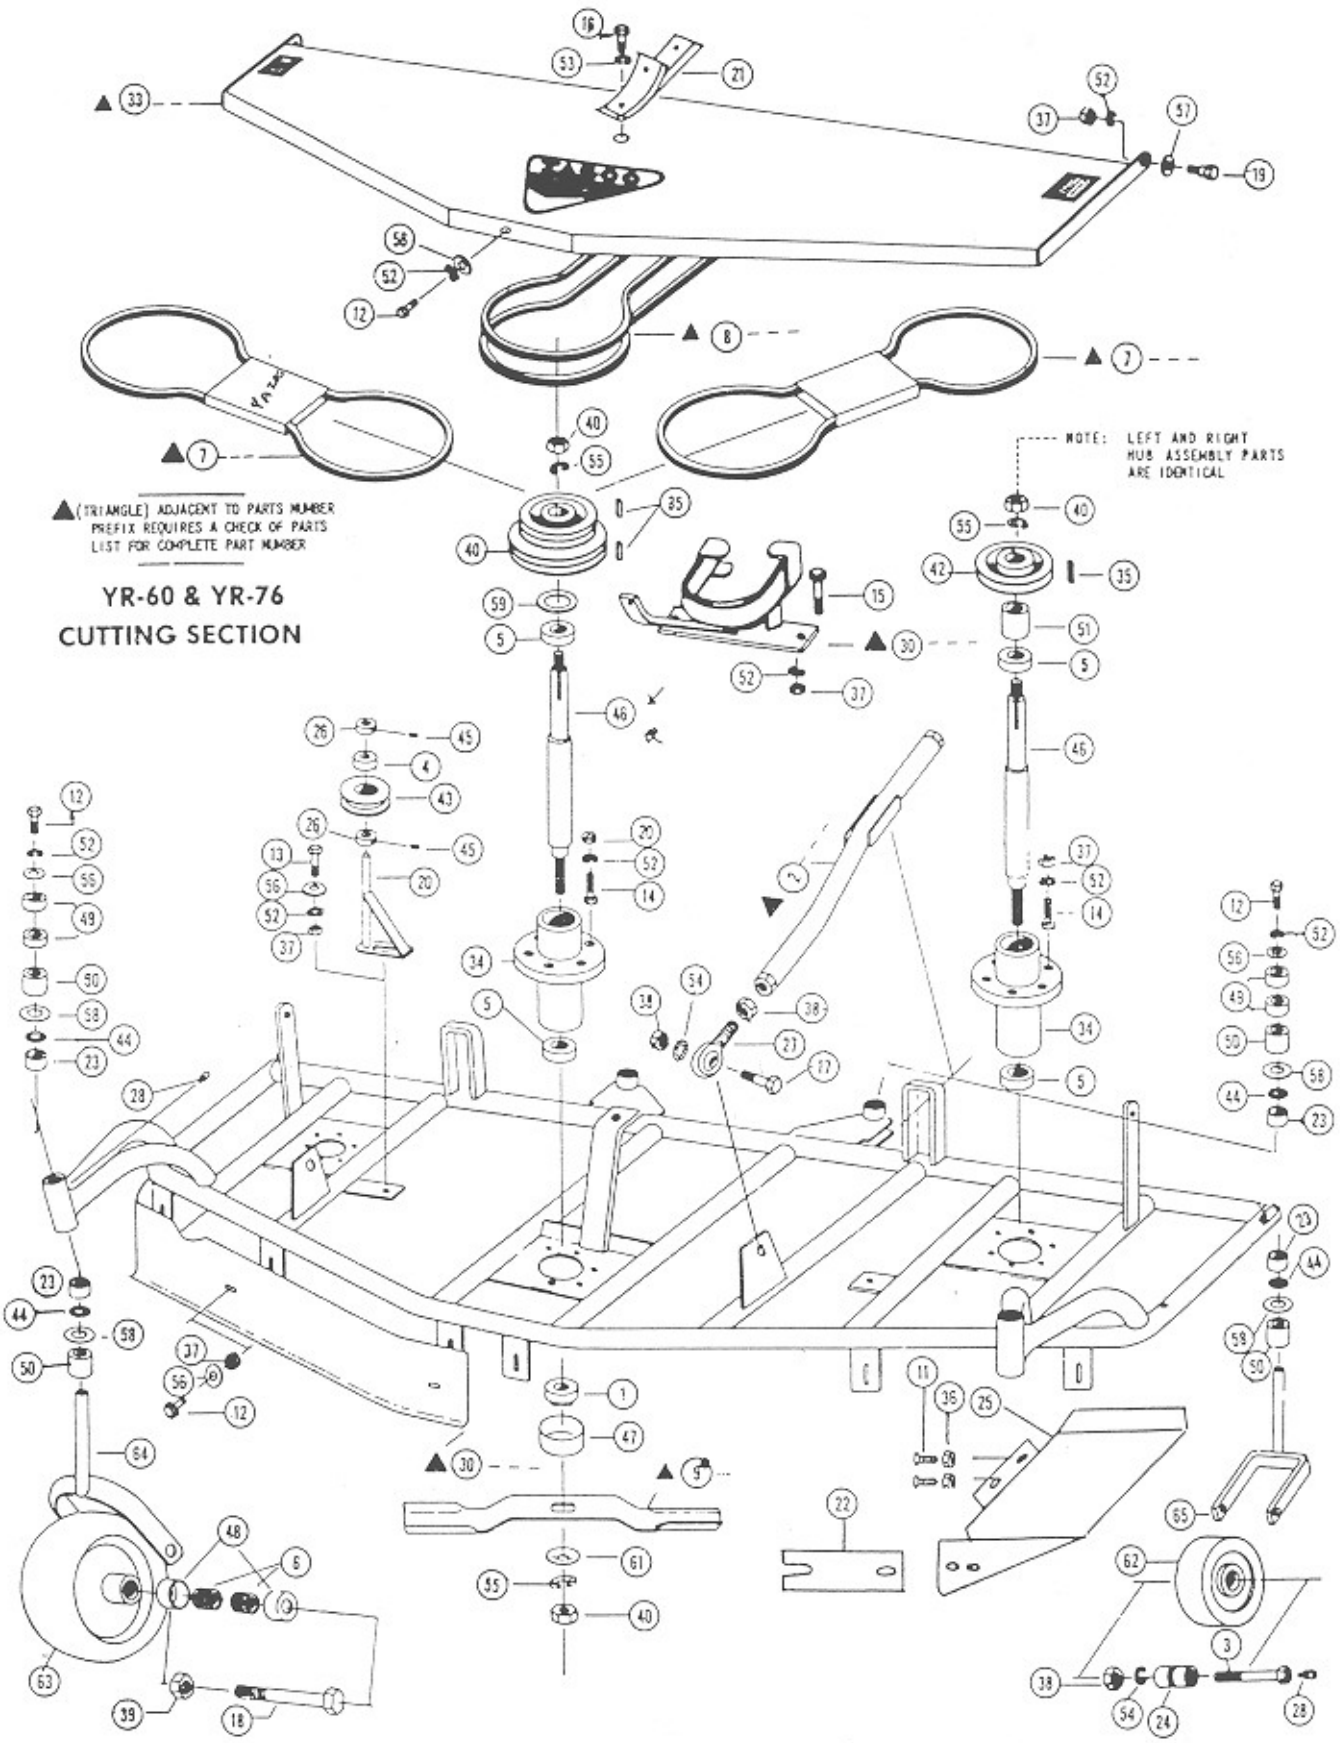
▲(TRIANGLE) ADJACENT TO PARTS NUMBER PREFIX REQUIRES A CHECK OF PARTS LIST FOR COMPLETE PART NUMBER
NOTE: LEFT AND RIGHT HUB ASSEMBLY PARTS ARE IDENTICAL

YR-60 & YR-76
CUTTING SECTION

YR-60 & YR-76 Parts List Cutting Section

No.	Part No.	Description
1	101-003	Adaptor, Blade, Left Hand
2 ▲	102-024	Arm, Cutting Section, YR-60
2 ▲	102-047	Arm, Cutting Section, YR-76
3	103-095	Axle, Cutting Section, Rear
4	204-020	Bearing, Idler
5	204-060	Bearing, Hub
6	204-076	Bearing, Cut. Sec. Wheel
7 ▲	205-310	Belt, Blade Drive, YR-76
7 ▲	205-356	Belt, Wing Drive, YR-60
8 ▲	205-367	Belt, Wing Drive, YR-76
8 ▲	205-395	Belt, Blade Drive, YR-60
9 ▲	206-760	Blade, YR-60 Offset
9 ▲	206-776	Blade, YR-76 Offset
10	208-021	Bolt, 1/4 x 3/4 RH
11	209-051	Bolt, 1/4-20 x 2
12	209-108	Bolt, 5/16-18 x 3/4 HH
13	209-114	Bolt, 5/13-18 x 1 HH
14	209-120	Bolt, Hub 5/16-18 x 1 1/4 HH
15	209-126	Bolt, Hub & Guide 5/16-18 x 1 1/2 HH (2 Req'd.)
16	209-314	Bolt, 3/8-16 x 1 HH
17	209-617	Bolt, 5/8-18 x 1 1/2 HH
18	209-666	Bolt, (Front Caster Wheel) 5/8-18 x 5 3/8
19	212-005	Bolt, 3/8 x 3/8 Stripper
20	214-102	Bracket, Tension
21	214-212	Bracket, Cutting Section Lift
22	214-213	Bracket, Chute
23	215-009	Bushing, Cutt. Sect. Wheel Yoke
24	215-025	Bushing, Spanner
25	306-011	Chute, Disc 60 & 76
26	311-002	Collar, 5/8 Set
27	502-004	End, Cutting Section Arm
28	603-004	Fitting, Grease
29 ▲	704-004	Guard, Right Front, YR-60
29 ▲	704-005	Guard, Left Front, YR-60
29 ▲	704-181	Guard, Front, Left Side YR-76
29 ▲	704-182	Guard, Front, Right Side YR-76
30 ▲	704-297	Guard Belt YR-60
30 ▲	704-298	Guard Belt YR-76
31	704-320	Guard, Rear 60
32	704-322	Guard, Rear 76
33 ▲	804-058	Hood, YR-60
33 ▲	804-059	Hood, YR-76
34	806-017	Housing, Steel Hub
35	1102-001	Key, 3/16 x 3/16 x 1
36	1401-013	Nut, 5/16-18
37	1401-020	Nut, 5/16-18
38	1401-070	Nut, 5/8-18 Jam
39	1401-072	Nut, 5/8-18 Lock
40	1401-073	Nut, 5/8-18 L.H. Full
41	1608-091	Pulley, Wing Dr. 5 1/4 O.D. x 3/4 4 Ga.
42	1608-092	Pulley, Wing Hub, Left & Right 4 5/8 O.D. x 3/4 S.G.
43	1608-201	Pulley, Idler, 2 3/4 O.D. S.G.
44	1806-001	Ring "O"
45	1901-006	Screw, Set, 5/16-18 x 1/4 A. H.
46	1904-040	Shaft, Hub
47	1906-006	Shield, Dust
48	1906-015	Shield, Cut. Sec. Wheel
49	1913-055	Spacer, 3/4 x 1/2
50	1913-057	Spacer, 3/4 x 1 use 1913-057
51	1913-110	Spacer, 3/4 I.D. x 1 1/8 O.D. x 1 7/32
52	2301-004	Washer, 5/16 Lock
53	2301-006	Washer, 3/8 Lock
54	2301-011	Washer, 5/8 Star Lock
55	2301-012	Washer, 5/8 L.H. Lock
56	2301-021	Washer, 5/16 Flat
57	2301-022	Washer, 3/8 Flat
58	2301-028	Washer, Flat 1 3/8 O.D.x 3/4 I.D.
59	2301-081	Washer, 3/4 x 1 1/4 #18 Ga. 2301-828
60	2301-090	Washer, 5/8 Cupped Spring Blade
61	2301-096	Washer, 5/8 Cupped Spring Blade
62	2302-004	Wheel, 5 x 1.75 Rear
63	2302-078	Wheel, Ass'y. Complete, Front
64	2501-021	Yoke, Front Wheel Mounting
65	2501-028	Yoke, Rear Wheel
	316-062	Cutting Section, Complete YR-60
	316-077	Cutting Section, Complete YR-76 NLA

WARNING

DO NOT OPERATE ANY YAZOO PIECE OF EQUIPMENT
WITHOUT FIRST READING AND UNDERSTANDING THIS MANUAL.

YAZOO
MANUFACTURING COMPANY, INC.

YAZOO MASTER MOWER

P. O. BOX 4449 / 3607 LIVINGSTON ROAD
PHONE: (601) 366-6421 / JACKSON, MISSISSIPPI 39216

BILL OF MATERIAL:

1. 1 - CDM Muffler (1304-002)
2. 1 - 1¾" Clamp (307-011)
3. 1 - 1 5/8" Clamp (307-010)
4. 1 - 1¼" x 1" Reducer ELL (503-023)
5. 1 - 1¼" Short Nipple (503-016)
6. 1 - 1" Close Nipple (503-022)
7. 1 - Exhaust Deflector (408-002)

DIRECTIONS:

1. Remove original Muffler and 8" pipe. Leave original 1" nipple in engine and 90 degree 1" ell.
2. Screw 1" Close Nipple into original 90 degree 1" ell.
3. Screw 1¼" x 1" Reducer 90 degree ell on 1" close nipple.
4. Attach Muffler to 1¼" Nipple with 1¾" clamp.
5. Attach muffler and exhaust deflector to tractor frame by drilling two (2) 5/16" holes in lower frame and secure with 1 5/8" clamp provided. (Note: Attach exhaust deflector pointing to rear of tractor.)

SHIPPING WEIGHT—6 lbs.

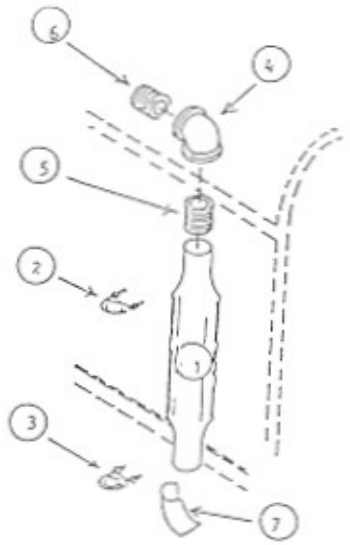

MUFFLER KIT
YR - 48 and YR - 42 BRIGGS AND STRATTON

BILL OF MATERIAL:

1. 1 - CDM Muffler (1304-001)
2. 1 - 1¾" Clamp (307-011)
3. 1 - 1 5/8" Clamp (307-010)
4. 2 - Short 1¼" Nipples (503-016)
5. 1 - 5" x 1¼" Nipple (503-017)
6. 1 - 90 degree Ell 1¼" (503-014)
7. 1 - 45 degree Ell 1¼" (503-018)
8. 1 - Exhaust Deflector (408-002)

DIRECTIONS:

1. Remove original muffler and pipe.
2. Screw 1¼" close nipple into block.
3. Screw 1¼" x 45 degree ell on 1¼" close nipple.
4. Screw 1¼" close nipple into 45 degree ell.
5. Screw 1¼" x 90 degree ell on 1¼" close nipple.
6. Screw 1¼" x 5" nipple into 1¼" x 90 degree ell.
7. Attach muffler to 5" nipple using 1¾" clamp.
8. Attach muffler and exhaust deflector to tractor frame by drilling two (2) 5/16" holes in lower frame and secure with 1 5/8" clamp provided. (Note: Attach exhaust deflector pointing to rear of tractor.)

SHIPPING WEIGHT—8 lbs.

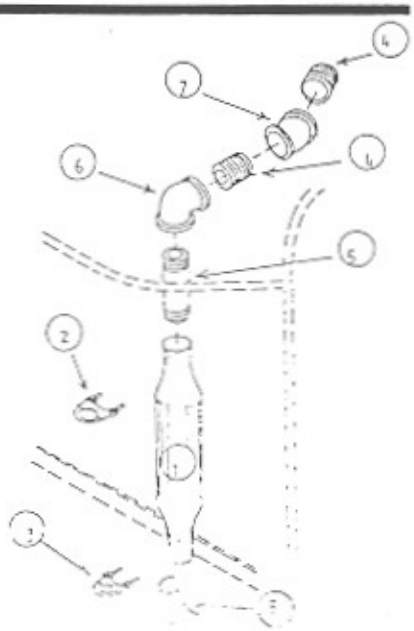

MUFFLER KIT
YR - 60 AGND WISCONSIN

BILL OF MATERIAL:

1. 1 - 1¼" x 90 degree Ell (503-014)
2. 2 - 1¼" x 10" Nipple (503-019)
3. 1 - 1¼" Close Nipple (503-020)
4. 1 - 1¼" Cuppler (503-021)
5. 1 - 1 5/8" Clamp (307-010)
6. 1 - Exhaust Deflector (408-002)

1304-004

DIRECTIONS:

1. Remove exhaust manifold from engine.
2. Place in vise and remove original nipple from manifold.
3. Screw 1¼" Close nipple into manifold.
4. Screw 1¼" x 90 degree ell on close nipple. Draw up as tight as possible.
5. Screw 1¼" x 10" nipple into 90 degree ell.
6. Screw 90 degree ell from original muffler on 1¼" x 10" nipple.
7. Remount manifold on engine.
8. Screw 1¼" x 10" nipple into 90 degree ell.
9. Screw 1¼" coupler on 1¼" x 10" nipple.
10. Screw original muffler in 1¼" coupler.
11. Attach muffler and exhaust deflector to tractor frame by drilling two (2) 5/16" holes in lower frame and secure with 1 5/8" clamp provided. (Note: Attach exhaust deflector pointing to rear of tractor.)

SHIPPING WEIGHT—7 lbs.

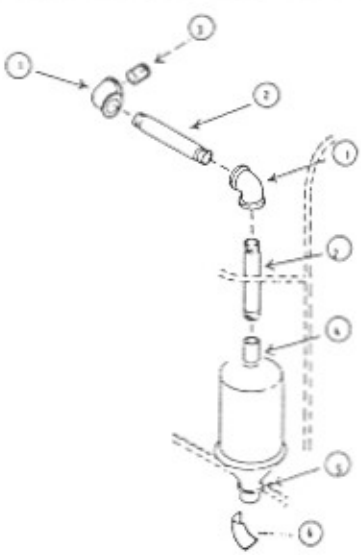

MUFFLER KIT
YR - 60 TJD & YR - 76 TJD WISC.

TRANSAXLE ASSEMBLY

YR36, YR42, YR48, YR60 & YR76

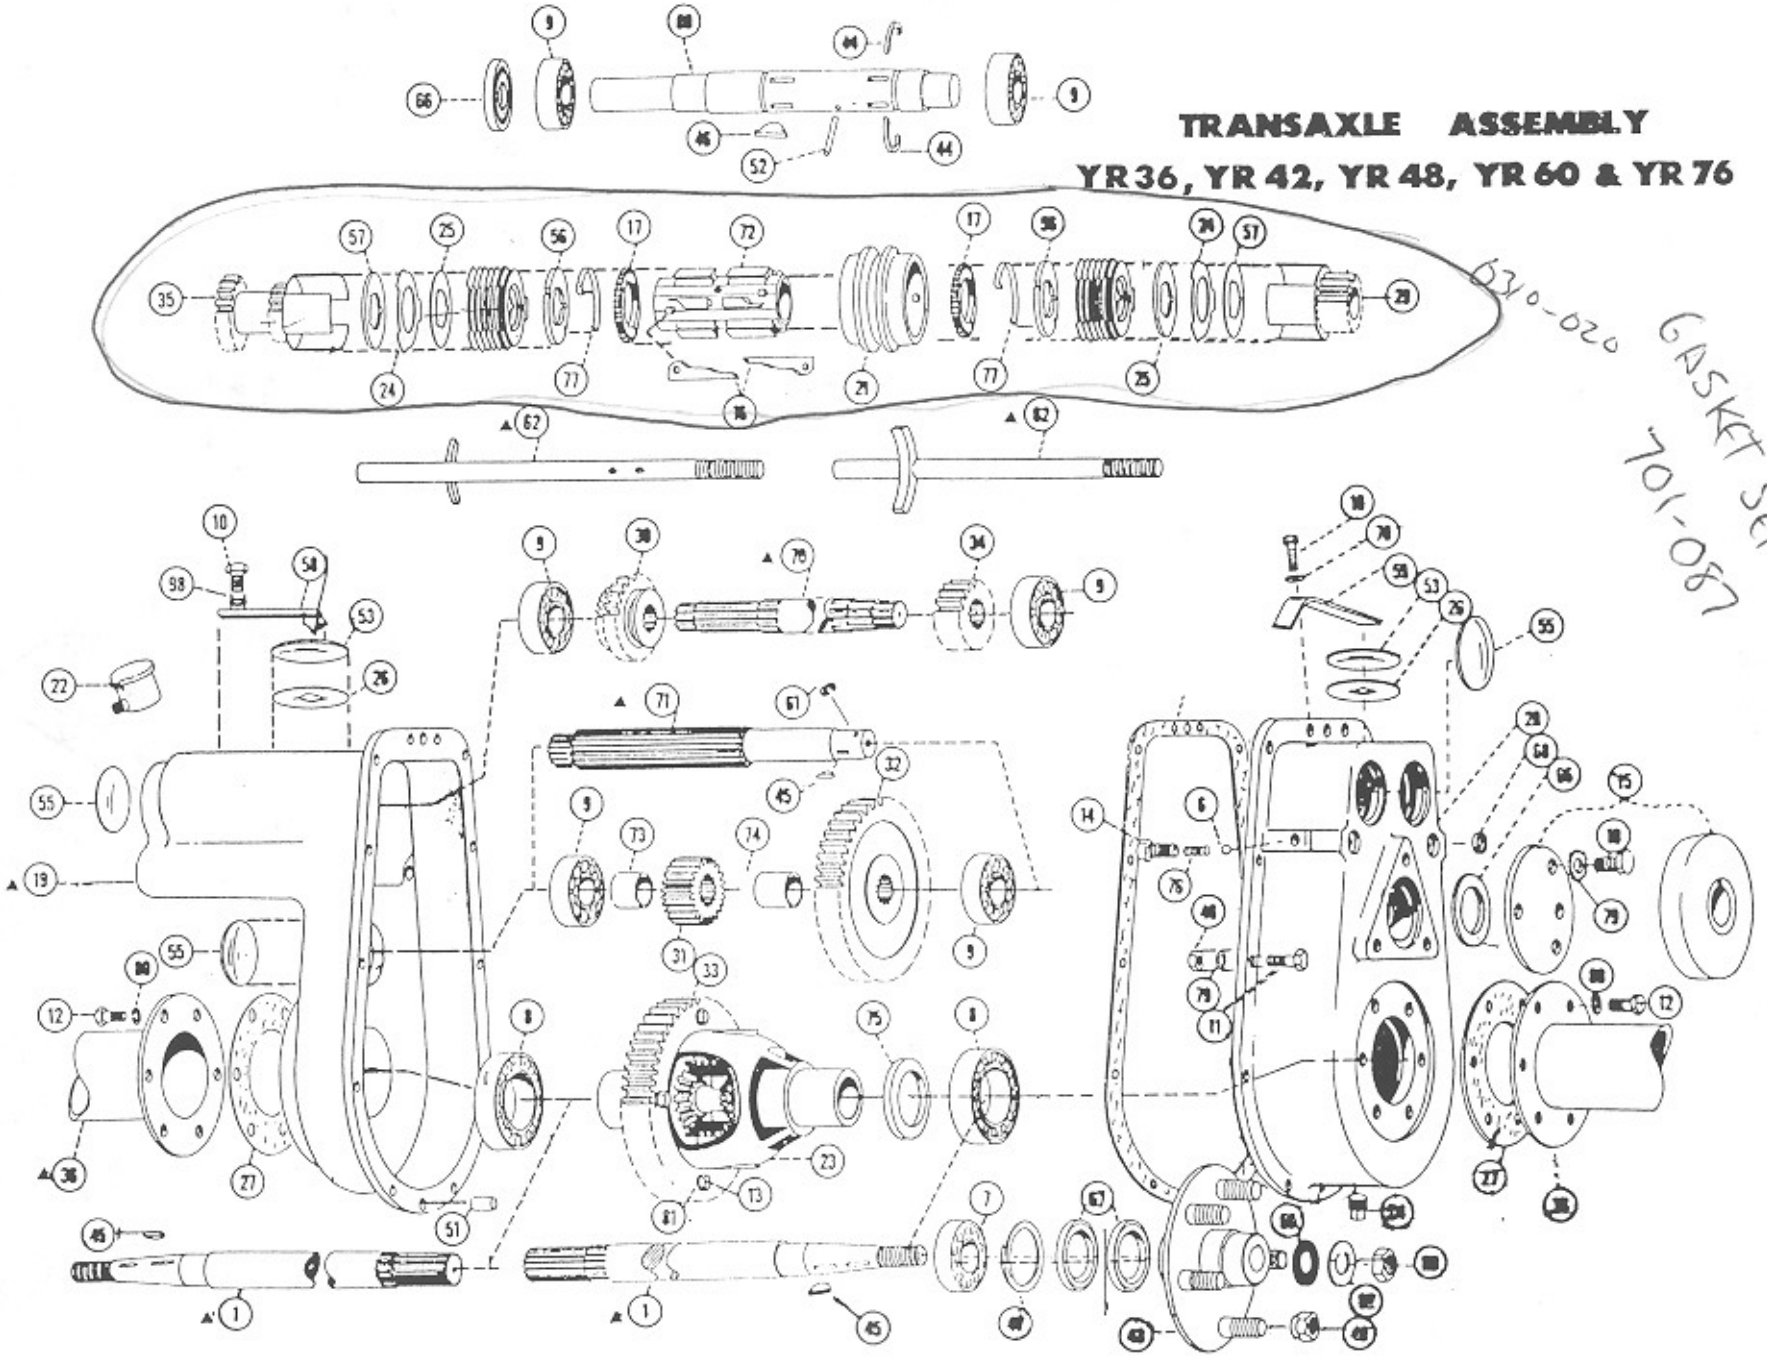

630-020 GASKET SET
701-087

YR-36, 42, 48, 60 & YR-76
Transaxle Parts List

Ref. No.	Part No.	Description
1	▲ 103-088	Axle, Long YR-48, 60 & 76
2	▲ 103-091	Axle, Short, YR-48, 60 & 76
3	▲ 103-092	Axle, Long, YR-42
4	▲ 103-093	Axle, Short, YR-36 & 42
5	▲ 103-094	Axle, Long, YR-36
6	204-037	Ball, Detente
7	204-038	Bearing, Ball
8	204-039	Bearing, Diff. Carrior
9	204-040	Bearing, Ball
10	209-108	Bolt, 5/16-18 x 3/4 HH
11	209-114	Bolt, 5/16-18 x 1 HH
12	209-307	Bolt, 3/8-16 x 3/4 HH
13	209-318	Bolt, 3/8-24 x 1 HH Ht.
14	212-011	Bolt, Spring Retainer
15	217-003	Brake, 5" Transmission
16	302-020	Cam, Clutch Dog
17	302-021	Cam, Clutch Adjustment
	304-053	Case, Shallow half, use 304-005 with 1606-007
19	▲ 304-054	Case, Deep Half
20	● 304-055	Case, Shallow Half, with Transaxle Brake
21	311-050	Collar, Selector
22	315-001	Cup, Oil Breather
23	403-003	Differential, Complete (Less Gear)
24	404-001	Disc, Outer (16 Required)
25	404-002	Disc, Inner (14 Required)
26	701-021	Gasket, Inspection Plate
27	701-022	Gasket, Axle Housing
28	▲ 701-026	Gasket, Transmission Housing
29	702-050	Gear, Reverse
30	702-051	Gear, High-Low Shift
31	702-052	Gear, Differential Drive
32	702-053	Gear, Intermediate Drive
33	702-054	Gear, Differential
34	702-057	Gear, Primary Drive
35	702-058	Gear, Forward Drive
36	▲ 806-130	Housing, Axle, Long, YR-48, 60 & 76
37	▲ 806-131	Housing, Axle, Short, YR-48, 60 & 76
38	▲ 806-132	Housing, Axle, Long, YR-42
39	▲ 806-133	Housing, Short, YR-36
40	▲ 806-134	Housing, Axle, Long, YR-36
41	▲ 806-135	Housing, Axle, Short, YR-36
42	▲ 806-136	Housing, Axle, Short, YR-42
43	▲ 807-036	Hub, Rider Drive Wheel
44	1101-001	Keeper, 2 Halves
45	1102-013	Key, Woodruff
46	1102-014	Key, Hypro
47	1207-025	Lock, Ring
48	1401-020	Nut, 5/16-18
49	1401-061	Nut, 7/16 Tapered
50	1401-071	Nut, 5/8-18 Full
51	1604-035	Pin, 3/8 x 3/4 Dowell
52	1604-036	Pin, Clutch Retainer
53	1605-031	Plate, Oil Fill Inspection
54	1606-006	Plug, 3/8 Std. Pipe Drain
55	1606-007	Plug, 1 7/8 Welch
56	1804-011	Retainer, Inner Disc
57	1804-012	Retainer, Outer Disc
58	1804-014	Retainer, Inspection Plate
59	1804-015	Retainer, Inspection Plate
60	1806-001	Ring, 3/4" I.D. x 1" O.D.
61	1806-009	Ring, Snap
62	▲ 1808-115	Rod, High-Low Selector
63	▲ 1808-116	Rod, Clutch Engaging
64	● 1808-117	Rod, High-Low Selector Used with Brake
65	● 1808-118	Rod, F & R Selector, Used with Brake
66	1902-010	Seal, Oil
67	1902-012	Seal, Axle
68	1902-013	Seal, Control Rod Oil
69	1904-153	Shaft, Clutch
70	▲ 1904-155	Shaft, Primary Drive
71	▲ 1904-159	Shaft, Intermediate, Used with Brake
72	1912-020	Sleeve, Clutch
73	1912-024	Sleeve, Clutch, Short
74	1912-025	Sleeve, Intermediate, Long
75	1913-034	Spacer, Differential
76	1916-013	Spring, Detente
77	1916-054	Spring, Clutch Adjusting
78	2301-004	Washer, 5/16 Lock
79	2301-005	Washer, 5/16 Ext. Star Lock
80	2301-006	Washer, 3/8 Lock
81	2301-014	Washer, 3/8 Int. Star Lock
82	2301-096	Washer, 5/8 Cupped Spring

310-020	Clutch, Complete
2006-036	Transaxle, Complete, YR-36
2006-042	Transaxle, Complete, YR-42
2006-045	Transaxle W/brake YR-42
2006-060	Transaxle, Complete, YR-48, 60 & 76
2006-065	Transaxle W/brake, YR-48, 60 & 76

• Used only with Transmission Brake

YAZOO MANUFACTURING COMPANY, INC.

YAZOO MASTER MOWER

P. O. BOX 4449 / 3607 LIVINGSTON ROAD
PHONE: (601) 366-6421 / JACKSON, MISSISSIPPI 39216

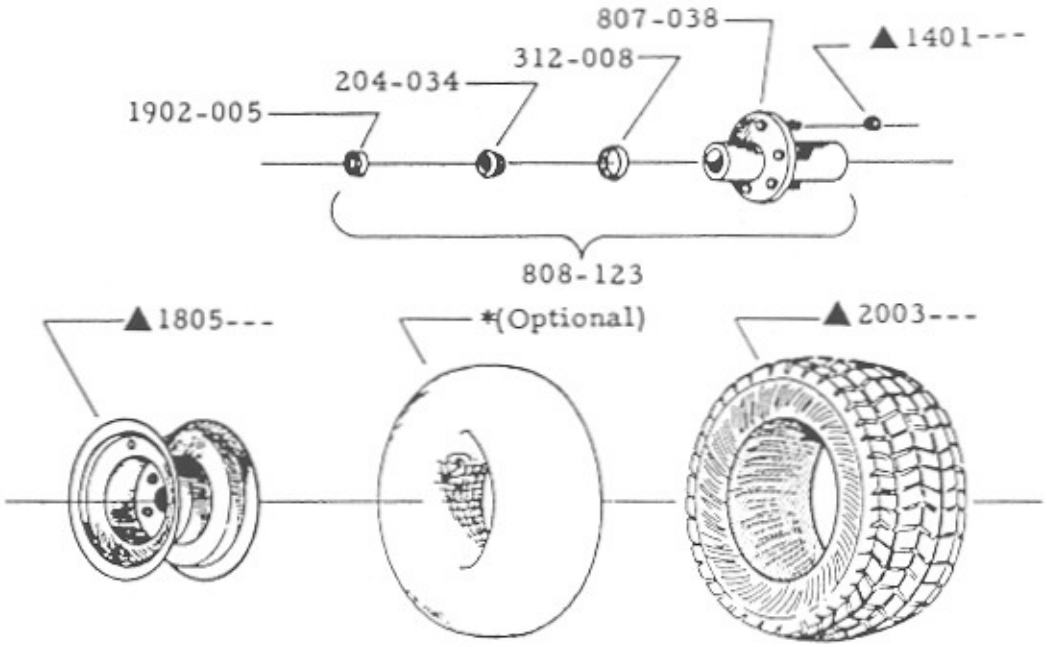

▲ (Triangle) adjacent to Parts Number PREFIX requires a check of Parts List for complete Parts No.
* Optional Parts

204-034	Bearing, Cone, 3/4 Tapered Roller
312-008	Cone, Bearing Race
807-036	Hub, Drive
807-038	Hub, 5-bolt Steering
808-123	Hub Ass'y., Steering Complete
▲1401-057	Nut, 1/2-20 Tapered Lug
1401-061	7/16 Tapered Lug Nut
▲1805-007	Rim, 5-Hole, 650 X 8 (YR-36, YR-42, & Rear YR-48, YR-60 & YR-76)
▲1805-008	Rim, 5-Hole, 950 X 8 (YR-48, YR-60, & YR-76 Front)
1902-005	Seal, Oil
▲2003-054	Tire, Traction, 650 X 8 2 Ply (YR-36, YR-42, & Rear YR-48, YR-60 & YR-76)
▲2003-058	Tire, Xtra Traction, 950 X 8 2 Ply (YR-48, YR-69 & YR-76 Front)
*2005-054	Tube, 650 X 8
*2005-055	Tube, 950 X 8
2305-018	Tire Ass'y., 16 X 650 X 8 Tubeless (YR-36, YR-42 & Rear YR-48, YR-60 & YR-76)
2305-022	Tire Ass'y., 18 X 950 X 8 Tubeless (Front YR-48, YR-60 & YR-76)